
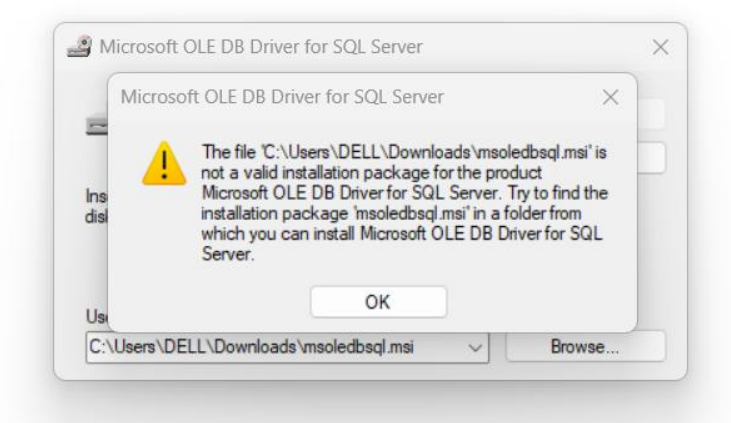
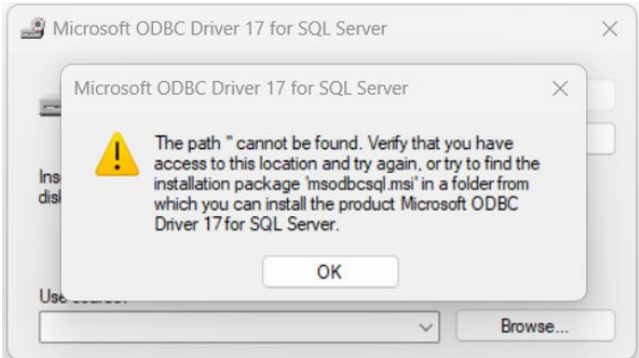


Issue: SQL Server 2022 Developer Edition setup Error

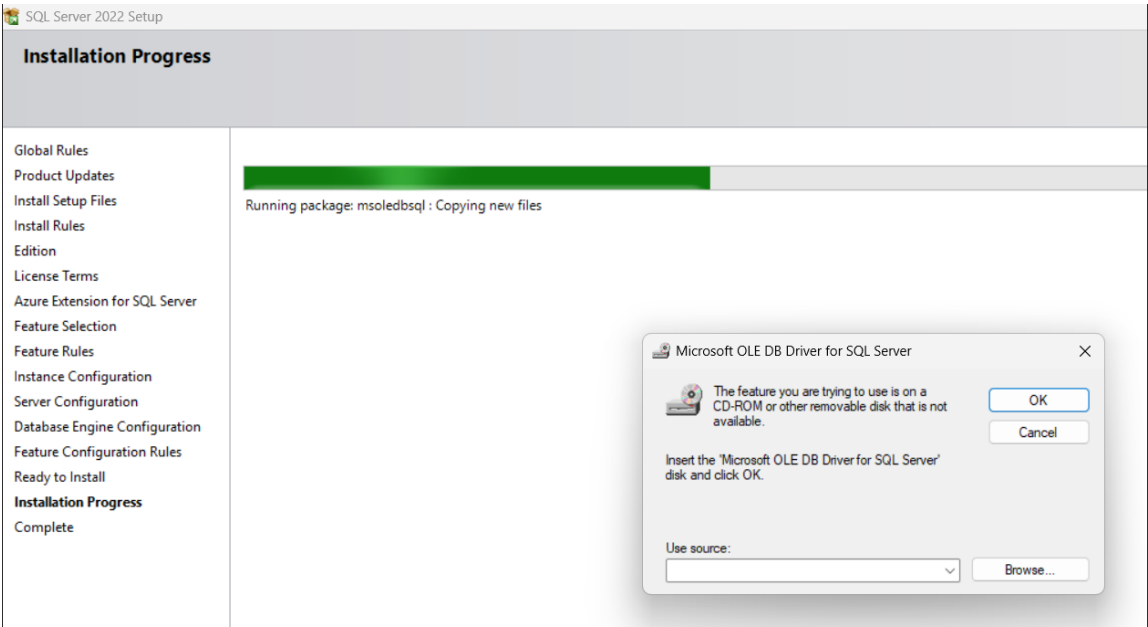

Root Cause

The system had a **corrupted Microsoft OLE DB Driver for SQL Server 18 (version 18.7.5.0)** installation registered in Windows Installer. During SQL Server 2022 Developer Edition setup, the installer attempted to upgrade or validate the existing OLE DB driver package (msoledbsql), but the original MSI source package required by Windows Installer was missing from the local installer cache. As a result, Setup repeatedly prompted for **msoledbsql.msi** and failed to proceed.

Analysis

1. During SQL Server 2022 installation, Setup stopped at:
Running package: msoledbsql : Copying new files
2. Error messages indicated:
 - The feature was on a removable drive or unavailable source.
 - msoledbsql.msi could not be found.
 - Downloaded MSI packages were rejected because they did not exactly match the installed version.
3. Verification of installed components showed:

Component	Version
Microsoft OLE DB Driver for SQL Server	18.7.5.0
Microsoft OLE DB Driver 19 for SQL Server	19.4.2.0
4. Registry inspection identified the affected OLE DB 18 installation:
Product Code:
{9E43DE89-BFB0-49E5-A622-E9A01F1C63DB}
5. The issue was isolated to the OLE DB 18 installation because SQL Server Setup was invoking the msoledbsql package and Windows Installer could not locate the original MSI source associated with that product code.

Fix

Removed the corrupted OLE DB Driver 18 installation using Windows Installer.

Command executed:

```
msiexec /x {9E43DE89-BFB0-49E5-A622-E9A01F1C63DB}
```

Result:

- The broken OLE DB Driver 18 registration was successfully removed.
- SQL Server 2022 Setup no longer requested msoledbsql.msi.
- Installation proceeded successfully.

Resolution Summary

A stale/corrupted **Microsoft OLE DB Driver 18** installation with a missing MSI source caused SQL Server 2022 Setup to fail during prerequisite package installation.

Removing the orphaned OLE DB 18 installation using its MSI product code resolved the issue and allowed SQL Server Setup to continue normally.